

Decorative Cushions / Decorative Cushion

40x40

Design /

EMU's decorative cushions stand out for the variety of their weave, patterns and texture. From highly fanciful prints to solid pastels, EMU decorative cushions imbue both indoor and outdoor areas with great personality.



Description

Code: **C/701**

Typology: **Decorative**

Collection: **Decorative Cushions**

Shape: Square

Technical Info



Width: **40 cm**

Depth:

Height: **40 cm**

Weight: **0.60 Kg**

Static Load:

Packaging

Packages: **1**

Pieces for pack: **1**

Dimensions: **43x19x43 cm**

Volume: **0.035 mc**

Polyethylene bag and cardboard box

Decorative Cushions / Decorative Cushion

40x40

Design /

Colors

Decorative Cushions / Decorative Cushion 40x40 Design /

Materials

Fabrics Basic

Acrylic fabric: a fibre whose base element is a polymer chain consisting of 85% acrylonitrile. Acrylic fibre combines the aesthetic qualities of a luxurious fabric with the texture and feel of wool with the functional qualities of resistance to the elements: UV resistant, it does not stain and does not rot upon contact with water as it is fast-drying.

Maintenance:

Avoid prolonged contact with greasy substances and/or dyes or colorants that could be absorbed by the covering material and cause permanent stains, as well as deteriorating the yarn structure. In the case of use near the sea or swimming pools, periodic washing is recommended. Frequent washing: follow the specific instructions given on the label for each material. Use water and non-abrasive, colorless, neutral PH liquid detergents. If necessary, allow the detergent to act for a few minutes. Rinse thoroughly with water at a temperature not higher than 30°C (86°F). If pressure cleaning devices are used, keep the tip of the nozzle at a distance of at least 60-70 cm from the surface of the product. If necessary, repeat the operation. Do not use abrasive sponges to remove stains and do not treat with bleach or chlorine.

Fabrics Standard

Acrylic fabric: a fibre whose base element is a polymer chain consisting of 85% acrylonitrile. Acrylic fibre combines the aesthetic qualities of a luxurious fabric with the texture and feel of wool with the functional qualities of resistance to the elements: UV resistant, it does not stain and does not rot upon contact with water as it is fast-drying.

Polyester fabric: a fibre composed of linear macromolecules consisting mainly of polyethylene terephthalate. It has excellent mechanical properties: it withstands breakage, light and abrasion. It does not deform permanently, it has an excellent elastic recovery and is waterproof.

Polypropylene fabric: these are fibers that are generally very fine, with a high surface tension, thanks to which water can pass through and flow out quickly. Strength and durability are among the main advantages offered by this material, which also provides good thermal insulation.

Fabric 85% polypropylene, 15% polyester: mixed fabric with the two fibres mentioned above.

Maintenance:

Avoid prolonged contact with greasy substances and/or dyes or colorants that could be absorbed by the covering material and cause permanent stains, as well as deteriorating the yarn structure. In the case of use near the sea or swimming pools, periodic washing is recommended. Frequent washing: follow the specific instructions given on the label for each material. Use water and non-abrasive, colorless, neutral PH liquid detergents. If necessary, allow the detergent to act for a few minutes. Rinse thoroughly with water at a temperature not higher than 30°C (86°F). If pressure cleaning devices are used, keep the tip of the nozzle at a distance of at least 60-70 cm from the surface of the product. If necessary, repeat the operation. Do not use abrasive sponges to remove stains and do not treat with bleach or chlorine.

Decorative Cushions / Decorative Cushion

40x40

Design /

Avoid prolonged contact with greasy substances and/or dyes or colorants that could be absorbed by the covering material and cause permanent stains, as well as deteriorating the yarn structure. In the case of use near the sea or swimming pools, periodic washing is recommended. Frequent washing: follow the specific instructions given on the label for each material. Use water and non-abrasive, colorless, neutral PH liquid detergents. If necessary, allow the detergent to act for a few minutes. Rinse thoroughly with water at a temperature not higher than 30°C (86°F). If pressure cleaning devices are used, keep the tip of the nozzle at a distance of at least 60-70 cm from the surface of the product. If necessary, repeat the operation. Do not use abrasive sponges to remove stains and do not treat with bleach or chlorine.

Tessuti Premium

All fabrics can show hues which are slightly different because they come from different production batches or have a different exposure to light. This feature should not be considered a defect but a characteristic of the product. EMU uses the most advanced technologies in the textile industry to produce outdoor furniture. Our materials are resistant to water splashing, UV rays, salt deposits, and perspiration, all of which does not cause them to lose their structural and comfort features. After it has rained we recommend you dry the furniture with fabrics in order to prevent the formation of damp stains and moulds. To make the products last longer, EMU recommends to store them, if they are not used for a long time (e.g. autumn/winter) or if it rains persistently, in a closed, aerated and dry space, covering them with canvasses to preserve their condition and protect them from dust and dirt. Before you put them away, make sure that they are completely dry. It is advisable to use covers/linings outdoors, but just for short periods. Covers are not an alternative to winter storage of the products. If it rains always make sure that there is no humidity between the lining and the products in order to prevent the formation of moulds; these are textile manufacturing products, therefore the presence of residual humidity is possible and may cause mould formation. All materials meet the most stringent quality standards for outdoor use; these fabrics are fastdrying and low-maintenance.

Maintenance:

Avoid prolonged contact with greasy substances and/or dyes or colorants that could be absorbed by the covering material and cause permanent stains, as well as deteriorating the yarn structure. In the case of use near the sea or swimming pools, periodic washing is recommended. Frequent washing: follow the specific instructions given on the label for each material. Use water and non-abrasive, colorless, neutral PH liquid detergents. If necessary, allow the detergent to act for a few minutes. Rinse thoroughly with water at a temperature not higher than 30°C (86°F). If pressure cleaning devices are used, keep the tip of the nozzle at a distance of at least 60-70 cm from the surface of the product. If necessary, repeat the operation. Do not use abrasive sponges to remove stains and do not treat with bleach or chlorine.

Avoid prolonged contact with greasy substances and/or dyes or colorants that could be absorbed by the covering material and cause permanent stains, as well as deteriorating the yarn structure. In the case of use near the sea or swimming pools, periodic washing is recommended. Frequent washing: follow the specific instructions given on the label for each material. Use water and non-abrasive, colorless, neutral PH liquid detergents. If necessary, allow the detergent to act for a few minutes. Rinse thoroughly with water at a temperature not higher than 30°C (86°F). If pressure cleaning devices are used, keep the tip of

Decorative Cushions / Decorative Cushion

40x40

Design /

the nozzle at a distance of at least 60-70 cm from the surface of the product. If necessary, repeat the operation. Do not use abrasive sponges to remove stains and do not treat with bleach or chlorine.

Avoid prolonged contact with greasy substances and/or dyes or colorants that could be absorbed by the covering material and cause permanent stains, as well as deteriorating the yarn structure. In the case of use near the sea or swimming pools, periodic washing is recommended. Frequent washing: follow the specific instructions given on the label for each material. Use water and non-abrasive, colorless, neutral PH liquid detergents. If necessary, allow the detergent to act for a few minutes. Rinse thoroughly with water at a temperature not higher than 30°C (86°F). If pressure cleaning devices are used, keep the tip of the nozzle at a distance of at least 60-70 cm from the surface of the product. If necessary, repeat the operation. Do not use abrasive sponges to remove stains and do not treat with bleach or chlorine.