


## NEBULA

Designed by Joris Laarman, 2007


F455009

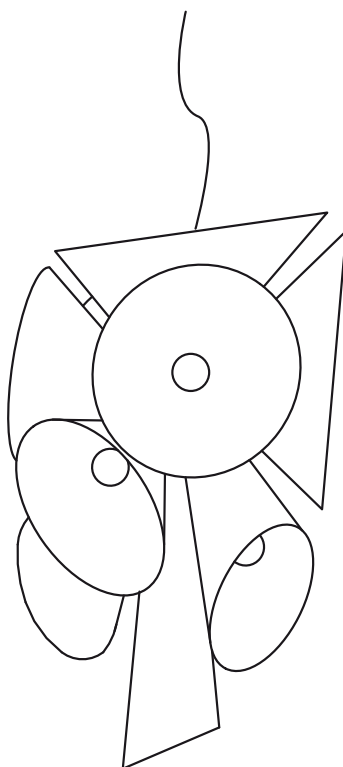

## NEBULA

F4550009

EN

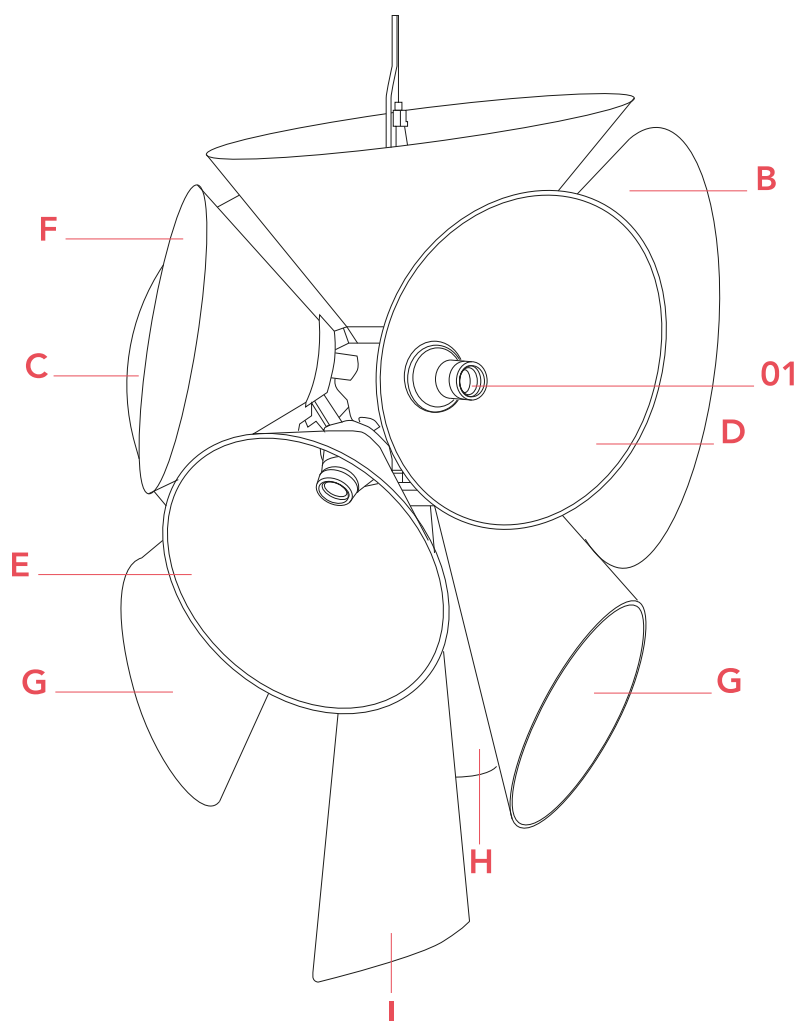

**01. RF04487** – Porcelain E27 lamp holder

**B. RF4550100** – Diffuser B assembly

**C. RF4550700** – Diffuser C assembly

**D. RF4550200** – Diffuser D assembly

**E. RF4550500** – Diffuser E assembly

**F. RF4550800** – Diffuser F assembly

**G. RF4550600** – Diffuser G assembly

**H. RF4550400** – Diffuser H assembly


**I. RF4550300** – Diffuser I assembly

NEBULA F4550009

EN

## RF04487

PORCELAIN E27 LAMP HOLDER

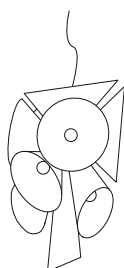

Nebula  
p.03



Ray F1  
p.09



Ray F2  
p.09



Ray T  
p.09



Tatou  
S2  
p.16

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

NEBULA F4550009

EN

**RF04487**

PORCELAIN E27 LAMP HOLDER

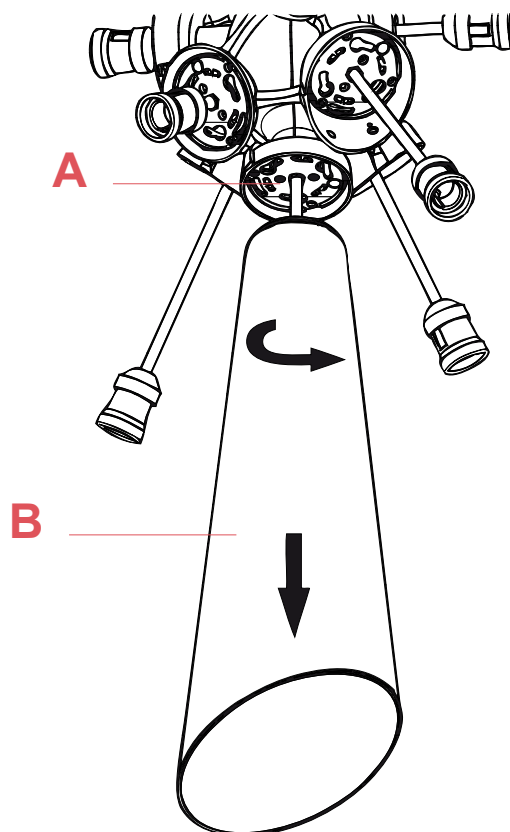


Fig.1

Delicately remove all the glass diffusers (B) from the lamp body (A), by rotating them counter clockwise (to turn the diffuser, utilize the external part of the diffuser).

**REMARK!!!** The top glass diffuser can not and must not be removed from the lamp body.

If the lamp holder that needs to be replaced is present in the top glass diffuser it is necessary disassemble the lamp body from ceiling.

NEBULA F4550009

EN

## RF04487

PORCELAIN E27 LAMP HOLDER



Fig.2

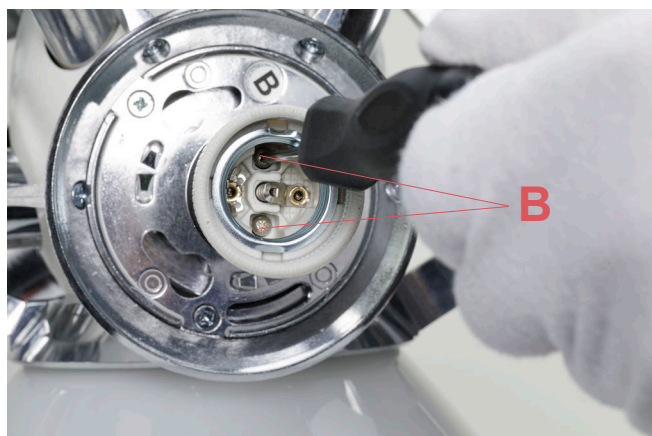


Fig.3

Unfasten the 2 screws (C) inside the lamp holder (D).

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

NEBULA F4550009

EN

## RF04487

PORCELAIN E27 LAMP HOLDER



Fig.4

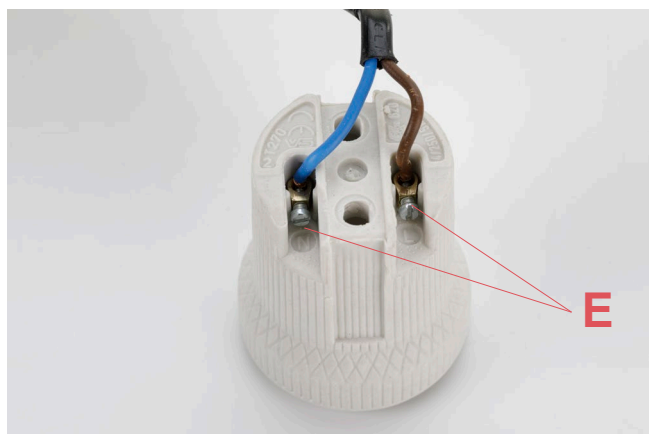


Fig.5

Disconnect the electrical wires (D) from the lamp holder terminals (E).

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

NEBULA F4550009

EN

## RF04487

PORCELAIN E27 LAMP HOLDER

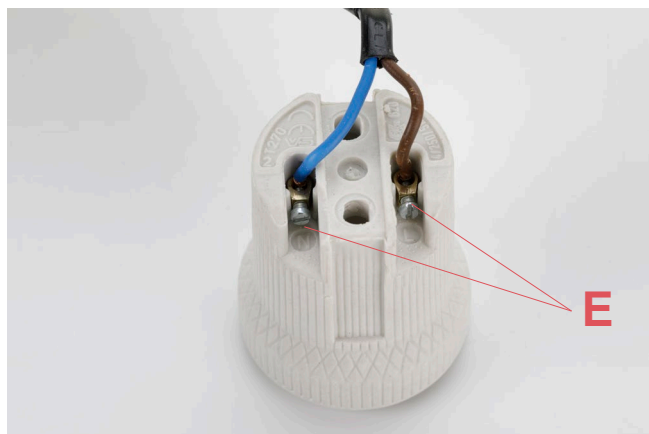


Fig.6



Fig.7

Assemble now the new spare-part:

Connect the electrical wires (D) of the lamp holder by respecting the polarities (E) indicated in correspondence of the connection terminal. Connect the Brown (live) wire in the terminal indicated with "L" and then connect the Blue (neutral) wire in the other terminal indicated with "N".

Fix the lamp holder to the body by fastening the two screws (C).(Fig.2-3 page 5)



**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

NEBULA F4550009

EN

## RF04487

PORCELAIN E27 LAMP HOLDER

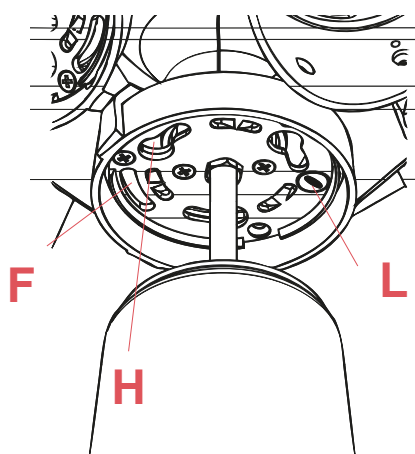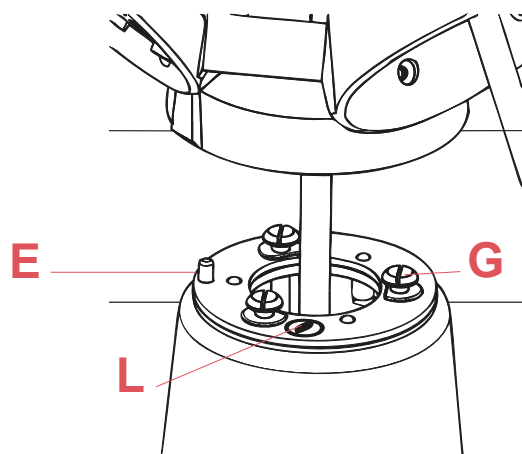

Assemble the type of diffuser on the lamp body ensuring that it corresponds with the reference pin (E) of the diffuser and with the opening (F) present of the lamp body. Insert the head of the three screws (G) into their appropriate slots (H) of the lamp body.

Rotate the diffuser clockwise until it locks in position (to turn the diffuser, utilize the external part of the diffuser). The diffuser type and the relative assembly are located and indicated by the proper label (L);

Fig.8

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.



NEBULA F4550009

EN

## RF4550100

DIFFUSER «B» ASSEMBLY SPARE PART



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

NEBULA F4550009

EN

## RF4550100

DIFFUSER «B» ASSEMBLY SPARE PART

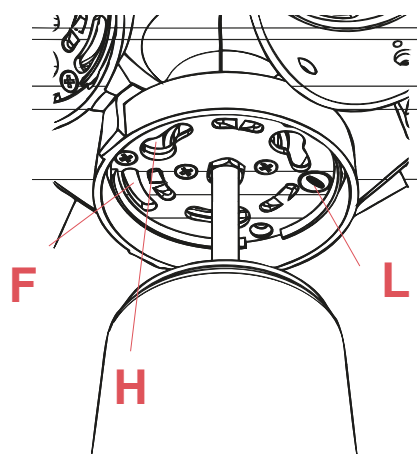
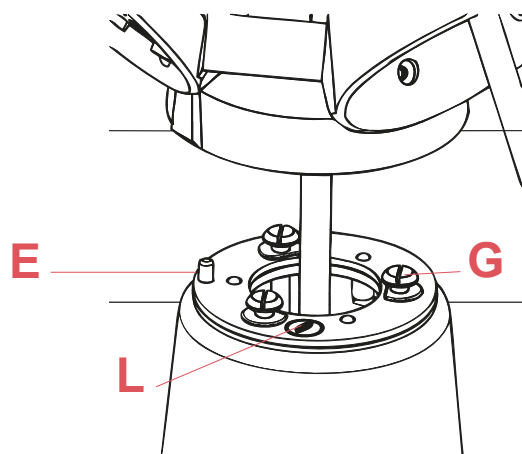


Fig.1

Assemble the type of diffuser on the lamp body ensuring that it corresponds with the reference pin (E) of the diffuser and with the opening (F) present of the lamp body. Insert the head of the three screws (G) into their appropriate slots (H) of the lamp body.

Rotate the diffuser clockwise until it locks in position (to turn the diffuser, utilize the external part of the diffuser). The diffuser type and the relative assembly are located and indicated by the proper label (L);

NEBULA F4550009

EN

## RF4550700

DIFFUSER «C» ASSEMBLY SPARE PART



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

NEBULA F4550009

EN

## RF4550700

DIFFUSER «C» ASSEMBLY SPARE PART

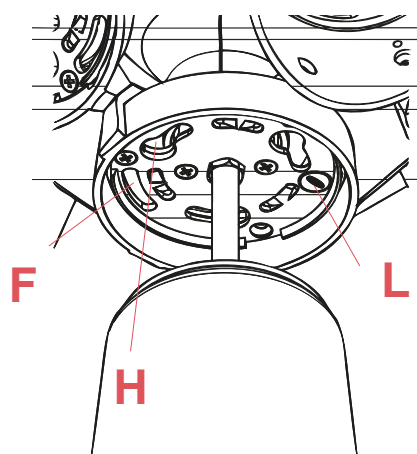
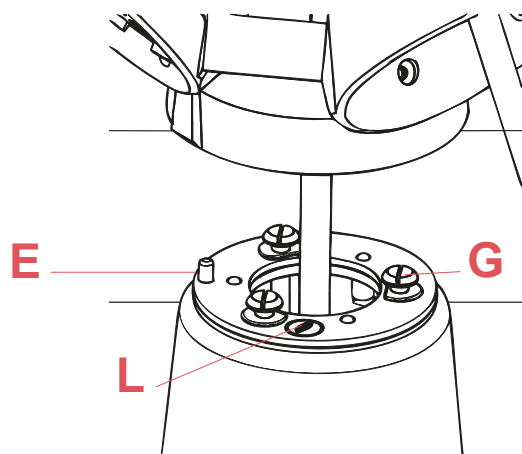


Fig.1

Assemble the type of diffuser on the lamp body ensuring that it corresponds with the reference pin (E) of the diffuser and with the opening (F) present of the lamp body. Insert the head of the three screws (G) into their appropriate slots (H) of the lamp body.

Rotate the diffuser clockwise until it locks in position (to turn the diffuser, utilize the external part of the diffuser). The diffuser type and the relative assembly are located and indicated by the proper label (L);

NEBULA F4550009

EN

**RF4550200**

DIFFUSER «D» ASSEMBLY SPARE PART



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

NEBULA F4550009

EN

## RF4550200

DIFFUSER «D» ASSEMBLY SPARE PART

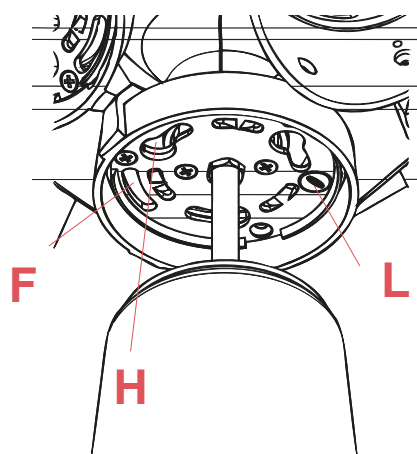
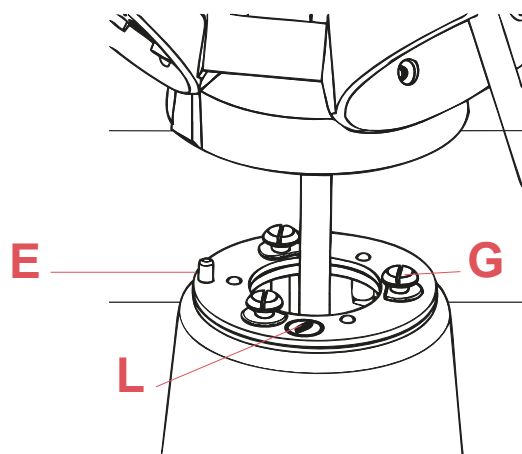


Fig.1

Assemble the type of diffuser on the lamp body ensuring that it corresponds with the reference pin (E) of the diffuser and with the opening (F) present of the lamp body. Insert the head of the three screws (G) into their appropriate slots (H) of the lamp body.

Rotate the diffuser clockwise until it locks in position (to turn the diffuser, utilize the external part of the diffuser). The diffuser type and the relative assembly are located and indicated by the proper label (L);

NEBULA F4550009

EN

## RF4550500

DIFFUSER «E» ASSEMBLY SPARE PART



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

NEBULA F4550009

EN

## RF4550500

DIFFUSER «E» ASSEMBLY SPARE PART


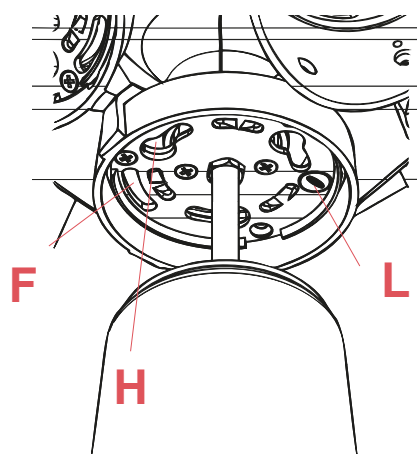


Fig.1

Assemble the type of diffuser on the lamp body ensuring that it corresponds with the reference pin (E) of the diffuser and with the opening (F) present of the lamp body. Insert the head of the three screws (G) into their appropriate slots (H) of the lamp body.

Rotate the diffuser clockwise until it locks in position (to turn the diffuser, utilize the external part of the diffuser). The diffuser type and the relative assembly are located and indicated by the proper label (L);

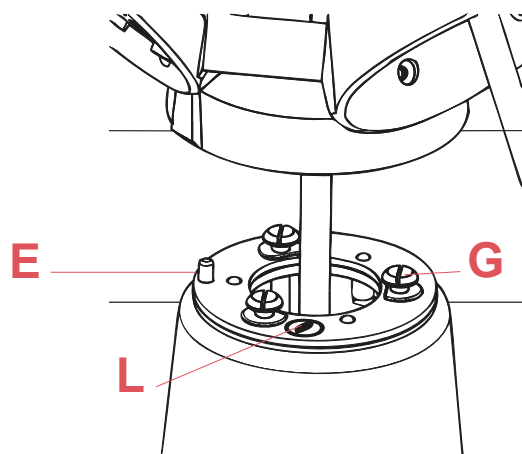

NEBULA F4550009

EN

## RF4550800

DIFFUSER «F» ASSEMBLY SPARE PART



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.



©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

NEBULA F4550009

EN

## RF4550800

DIFFUSER «F» ASSEMBLY SPARE PART

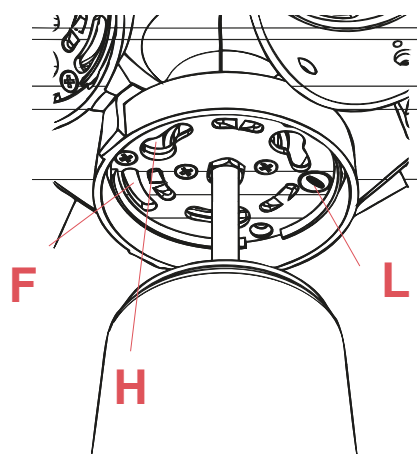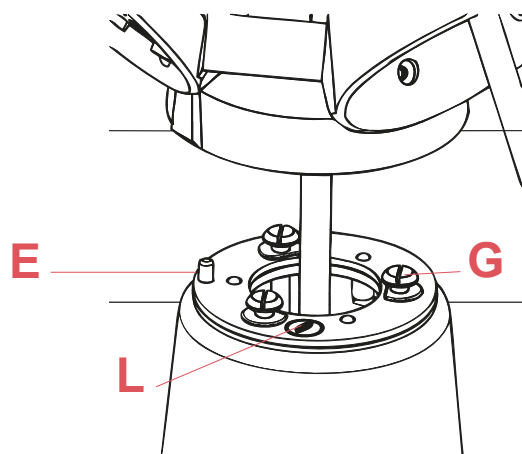

Assemble the type of diffuser on the lamp body ensuring that it corresponds with the reference pin (E) of the diffuser and with the opening (F) present of the lamp body. Insert the head of the three screws (G) into their appropriate slots (H) of the lamp body.

Rotate the diffuser clockwise until it locks in position (to turn the diffuser, utilize the external part of the diffuser). The diffuser type and the relative assembly are located and indicated by the proper label (L);

Fig.1

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

NEBULA F4550009

EN

## RF4550600

DIFFUSER «G» ASSEMBLY SPARE PART



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

NEBULA F4550009

EN

## RF4550600

DIFFUSER «G» ASSEMBLY SPARE PART

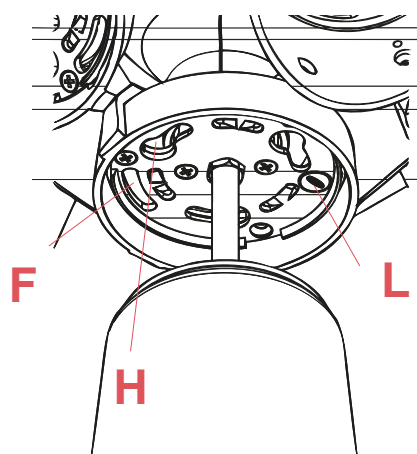
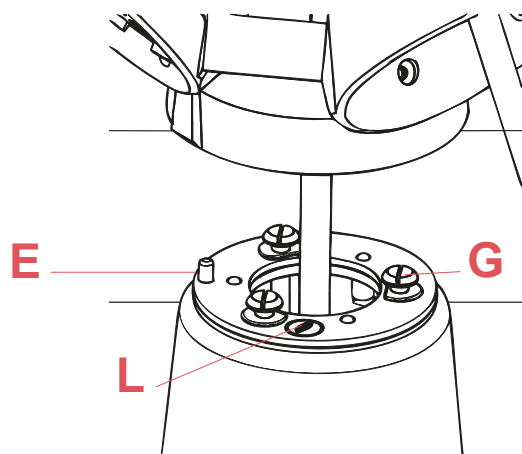


Fig.1

Assemble the type of diffuser on the lamp body ensuring that it corresponds with the reference pin (E) of the diffuser and with the opening (F) present of the lamp body. Insert the head of the three screws (G) into their appropriate slots (H) of the lamp body.

Rotate the diffuser clockwise until it locks in position (to turn the diffuser, utilize the external part of the diffuser). The diffuser type and the relative assembly are located and indicated by the proper label (L);

NEBULA F4550009

EN

## RF4550400

DIFFUSER «H» ASSEMBLY SPARE PART



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

NEBULA F4550009

EN

## RF4550400

DIFFUSER «H» ASSEMBLY SPARE PART

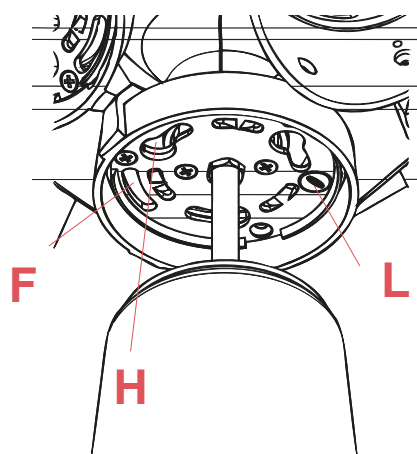
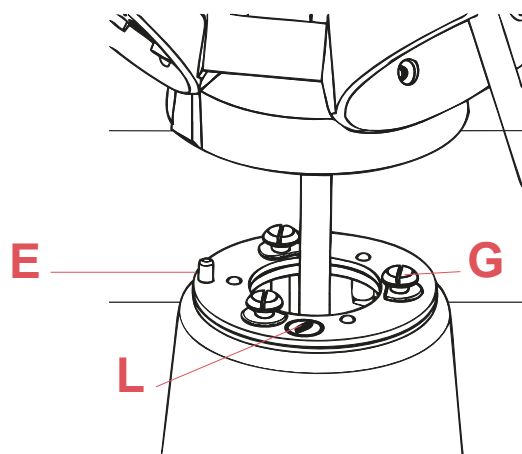


Fig.1

Assemble the type of diffuser on the lamp body ensuring that it corresponds with the reference pin (E) of the diffuser and with the opening (F) present of the lamp body. Insert the head of the three screws (G) into their appropriate slots (H) of the lamp body.

Rotate the diffuser clockwise until it locks in position (to turn the diffuser, utilize the external part of the diffuser). The diffuser type and the relative assembly are located and indicated by the proper label (L);

NEBULA F4550009

EN

## RF4550300

DIFFUSER «I» ASSEMBLY SPARE PART



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.



©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

NEBULA F4550009

EN

## RF4550300

DIFFUSER «I» ASSEMBLY SPARE PART

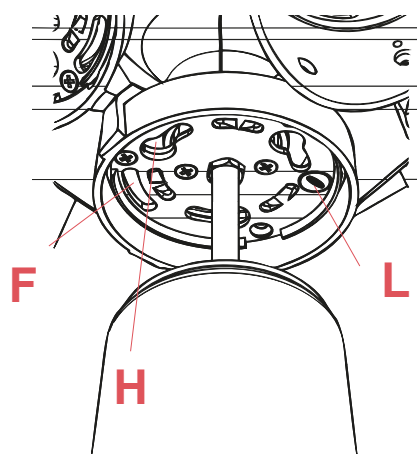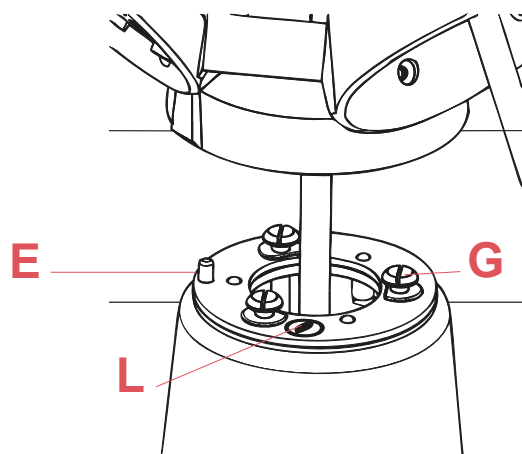

Assemble the type of diffuser on the lamp body ensuring that it corresponds with the reference pin (E) of the diffuser and with the opening (F) present of the lamp body. Insert the head of the three screws (G) into their appropriate slots (H) of the lamp body.

Rotate the diffuser clockwise until it locks in position (to turn the diffuser, utilize the external part of the diffuser). The diffuser type and the relative assembly are located and indicated by the proper label (L);

Fig.1

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.